



polymetron

"helping to make a safer world..."

On-Line **ACIDITY** Analyzer

- no filtration and sample preparation
- instant results with continuous performance validation
- manual sample entry system for spot-check analysis
- easy mode of operation

if your application is

- ✓ **WATER TREATMENT**
- ✓ **FOOD & BEVERAGE INDUSTRY**
- ✓ **POWER GENERATION**


your solution is the

POLYMETRON Model 8810 ACIDITY Analyzer



THE METHOD

Utilizing the classic pH titration method, the 8810 will perform under severe process conditions reliably and accurately.

After capturing the sample, a caustic titrant solution (e.g. NaOH) is injected to react first with the Free Acidity



and second with the Total Acidity




By tracking the pH changes versus the amount of caustic titrant solution consumed, the point of inflection or the endpoint will equal the concentration of FREE & TOTAL ACIDITY.



application note

Technical Specifications

Lower detectable limit:	0.1 mg/l Acidity / ± 0.02 mg/l
Measuring range:	0...10 / 100 / 1000 / 10000 mg/l Acidity
Detection Method:	pH Titration
Calibration:	Automatic / Manual / Process calibration
Chemical consumption:	10-20 ml/hr
Operating temperature:	40...130° F (5...55 °C)
Sample frequency:	typically 6...10/hr up to 25 application dependent
Sample streams:	1, up to 6 with sequencer Model 8811
Sample volume/cycle:	200...1000 ml
Sample temperature:	40...160° F (5...70 °C)
Sample pressure:	7...90 psi (0.5...6 bar)
Sample flow rate:	20 l/hr
Power:	110/220 VAC 50...60 Hz
Compressed air:	75...105 psi (5...7 bar)
Signal output:	2 0/4...20 mA Analog output 3 potential free relay contacts 1 RS 232/422 Serial output
Enclosure rating:	NEMA 12 / 4 / 4X or Ex proof

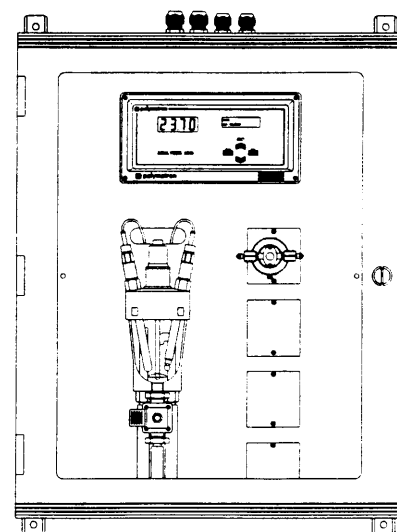

System Configuration

1 each	368810.40116	Analyzer Model 8810, pH base unit, 110V - 60Hz
	includes:	Measuring electrode, pH
		Reference electrode
		Temperature sensor, Pt100
		Titration solution pump, micro piston, for: 0.1N Sodium Hydroxide solution

OPTIONS

1 each	368810.52000	Automatic sample dilution system
1 each	368810.56000	Automatic chemical cleaning system
1 each	368810.60000	Automatic calibration system
1 each	368810.65000	Manual sample entry system
1 each	368810.76000	Automatic heating device / controller
1 each	359097.00160	Reagent / Calibration solution level sensor
1 each	368810.40000	NEMA 4X Fiberglass enclosure, wall mount
1 each	368810.45000	NEMA 12 Steel enclosure, floor mount

z **zellweger analytics, inc.**

100 Park Avenue
League City, Texas 77573
U.S.A.
Tel: 713 / 332 - 2484
Fax: 713 / 554 - 6795

Your local representative:

Monitoring and Treatment
PML **Systems for Industry.**
Process Technology
pmlprocess.com
Tel: (905) 206-9514 Fax: (905) 282-9903

This publication is not intended to form the basis of a contract, and the company reserves the right to amend the design of its instrument without notice.

z **astro** **z** **polymetron**

881LFTAC.APP